

1

Turn Valve lever to conditioned water



2

Connect garden hose from water supply to INLET of RV 1200HD.

3

Connect garden hose from outlet of RV 1200HD to your RV city water connection or potable water tank. *(On initial installation softener is ready for use and does not need to be regenerated. Allow water to run a few minutes as there may be some color throw from the new softening material in your new softener).*



4

Open water supply and enjoy all the benefits of soft water. * Turn handle to bypass position to have non-softened water. For example, when you water the lawn, you do not want to waste softened water.




REGENERATION INSTRUCTIONS

WHEN TO REGENERATE RV SOFTENER

Check water inside your RV or at the outlet side of the RV Softener with the test strips supplied. If water tests more than 3 grains hard (50ppm) it is time to regenerate the RV Softener following instructions below:

1 Turn off water supply. *(Remove pressure from system by opening bottom drain valve).*

2 Close bottom drain valve and turn valve lever counterclockwise to backwash position (Fig #1)

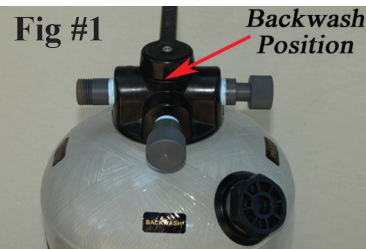

3 Remove plastic cap from backwash connection, attach garden hose and run to drain.

4 Turn on water supply and let softener backwash for 5 minutes or until water runs clear.

5 Turn off water supply, remove garden hose from backwash connection and replace plastic cap.

6 Remove salt fill cap, turn valve lever clockwise back to conditioned water position, open bottom drain valve and drain water from softener, close drain valve.

7 Add 6 lbs. solar or rock salt NOT PELLET TYPE *(approximately 10 cups)*. Clean salt fill cap threads and replace salt fill cap. **DO NOT OVERTIGHTEN-CAP HAS O-RING.**

8 Connect garden hose from outlet of softener and run to drain.



9 Turn on water supply slowly *(approximately 1.5 gpm)* for 15 minutes or until water at grain is no longer salty. Turn off water supply. Connect garden hose to RV and turn on water supply. Softener is now ready for use.

- *Open drain valve to drain water before storage-keep from freezing.*
- *The RV 1200HD may be stored horizontally or vertically (must be vertical when in use)*
- *Never remove the softening material from inside the tank.*
- *If softener is stored for a long period of time, a cap full of bleach may be added with the salt in step #7 to sanitize the softener.*
- *Regeneration video available at www.frakco.com*